

IMPORTANT RECEIVING INSTRUCTIONS:

Visually inspect all components for shipping damage. Shipping damage is not covered by warranty. If shipping damage is found notify the carrier at once. The carrier is responsible for all repair and replacement costs resulting from damage in shipment.

SAFETY FIRST:

It is impossible to predict the exact force needed for every pulling situation. The amount of press-fit and force of removal can vary greatly between jobs. The set-up requirements along with the size, shape and condition of the parts being pulled are all variables which must be considered. Remember that a significant amount of force can be exerted with a puller. Respect this force and always observe safety precautions. Failure to comply with the following cautions and warnings could cause equipment damage or personal injury.



WARNING: DO NOT touch or handle hydraulic hoses or fittings with pressure in the system. Escaping oil under pressure may cause serious injury. If oil is injected under the skin see a doctor immediately.

DO NOT make any electrical adjustments with electrical power active in the system.

DO NOT make or break any hydraulic connections with pressure in the system.

DO NOT overload the equipment. Use the right size puller.

DO NOT stand on, under or near the puller while in use. Keep hands, feet and clothing away from moving parts.

To avoid personal injury and equipment damage, make sure all hydraulic components withstand the maximum hydraulic pressure of 700 bar (10,000 psi).

Make sure all system components are protected from external sources of damage, such as excessive heat, flame, moving machine parts, sharp edges and corrosive chemicals.

Always check to ensure that all cylinders and components are securely fastened.



IMPORTANT: Inspect puller for dents, cracks, or excessive wear before each use. Immediately replace worn or damaged parts.

It is recommended to use 3-jaw puller whenever possible for a more secure grip, a more even pulling force and better stability.

Cover application with a protective blanket before applying force. Since high force is applied on the part being pulled, breakage may occur and user may be exposed to flying debris.

Use hydraulic gauges in each hydraulic system to indicate safe operating loads.

Apply force gradually. Be sure the puller is square with the component to be pulled.

Wear safety glasses or other approved eye protection.

Keep hands away from possible pinching points.

Always make sure the puller is aligned with the shaft.

Select the appropriate ram extender for each application.

Always place the puller in the lowest position and remove ram extenders while transporting.

Keep slide rollers and mast clean and lubricated.

Always keep puller hoist vertical and the control valve closed when not adjusting vertical position.

A small amount of oil seepage is normal from breather vent on hoist cylinder.

Use only genuine POSI LOCK parts and endorsed hydraulic components.



CAUTION: Make sure that all items being pulled are supported by a means other than the puller. When using a puller in excess of 50 pounds, support puller by other means than a single person. Do not use the puller for lifting or supporting objects.

Avoid sharp bends and kinks in hoses as they may lead to premature hose failure. Inspect hoses and fittings for leaks or damaged areas. Immediately discard and replace damaged components.

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (7172)727-132

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Instructions applicable to part numbers described below:

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Overview

| Portable 100-Ton Hydraulic Puller Systems | | | | | | | | | | |
|---|-----------------------|----------------|-----------------------------------|--|-------------------------------|------------------------------------|---------------------------------------|---------------------------------------|-----------------------------------|-----------------------|
| Model Number | Capacity Tons (kN) | Number of Jaws | Dimensions | | | | | | | Weight lbs. (kg) |
| | | | Spread A in. (mm) | Overall Length B in. (mm) | Reach C in. (mm) | Jaw Length D in. (mm) | Jaw Tip Width E in. (mm) | Tip Clearance F in. (mm) | Tip Depth G in. (mm) | |
| Single Acting | | | | | | | | | | |
| PH-102T | 100 tons (890 kN) | 2 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 1700 lbs. (771 kg) |
| PH-100T | 100 tons (890 kN) | 3 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 1950 lbs. (885 kg) |
| PH-123T | 100 tons (890 kN) | 2/3 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 2000 lbs. (907 kg) |
| Single Acting Vertical | | | | | | | | | | |
| PH-102TV | 100 tons (890 kN) | 2 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 1800 lbs. (816 kg) |
| Double Acting | | | | | | | | | | |
| PH-102TDA | 100 tons (890 kN) | 2 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 1800 lbs. (816 kg) |
| PH-100TDA | 100 tons (890 kN) | 3 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 2050 lbs. (930 kg) |
| PH-123TDA | 100 tons (890 kN) | 2/3 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 2100 lbs. (953 kg) |
| Double Acting Vertical | | | | | | | | | | |
| PH-102DATV | 100 tons (890 kN) | 2 | 7.5 to 70 in. (191 to 1778 mm) | 77 in. (1956 mm) | 50 in. (1270 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 1800 lbs. (816 kg) |

| 200-Ton Hydraulic Puller System | | | | | | | | | | |
|---------------------------------|-----------------------|----------------|-----------------------------------|--|-------------------------------|------------------------------------|---------------------------------------|---------------------------------------|-----------------------------------|------------------------|
| Model Number | Capacity Tons (kN) | Number of Jaws | Dimensions | | | | | | | Weight lbs. (kg) |
| | | | Spread A in. (mm) | Overall Length B in. (mm) | Reach C in. (mm) | Jaw Length D in. (mm) | Jaw Tip Width E in. (mm) | Tip Clearance F in. (mm) | Tip Depth G in. (mm) | |
| PH-200T | 200 tons (1779 kN) | 4 | 6.5 to 70 in. (203 to 1778 mm) | 78.5 in. (1994 mm) | 48 in. (1219 mm) | 53 in. (1346 mm) | 1.25 in. (32 mm) | 3.5 in. (89 mm) | 3.5 in. (89 mm) | 4150 lbs. (1882 kg) |

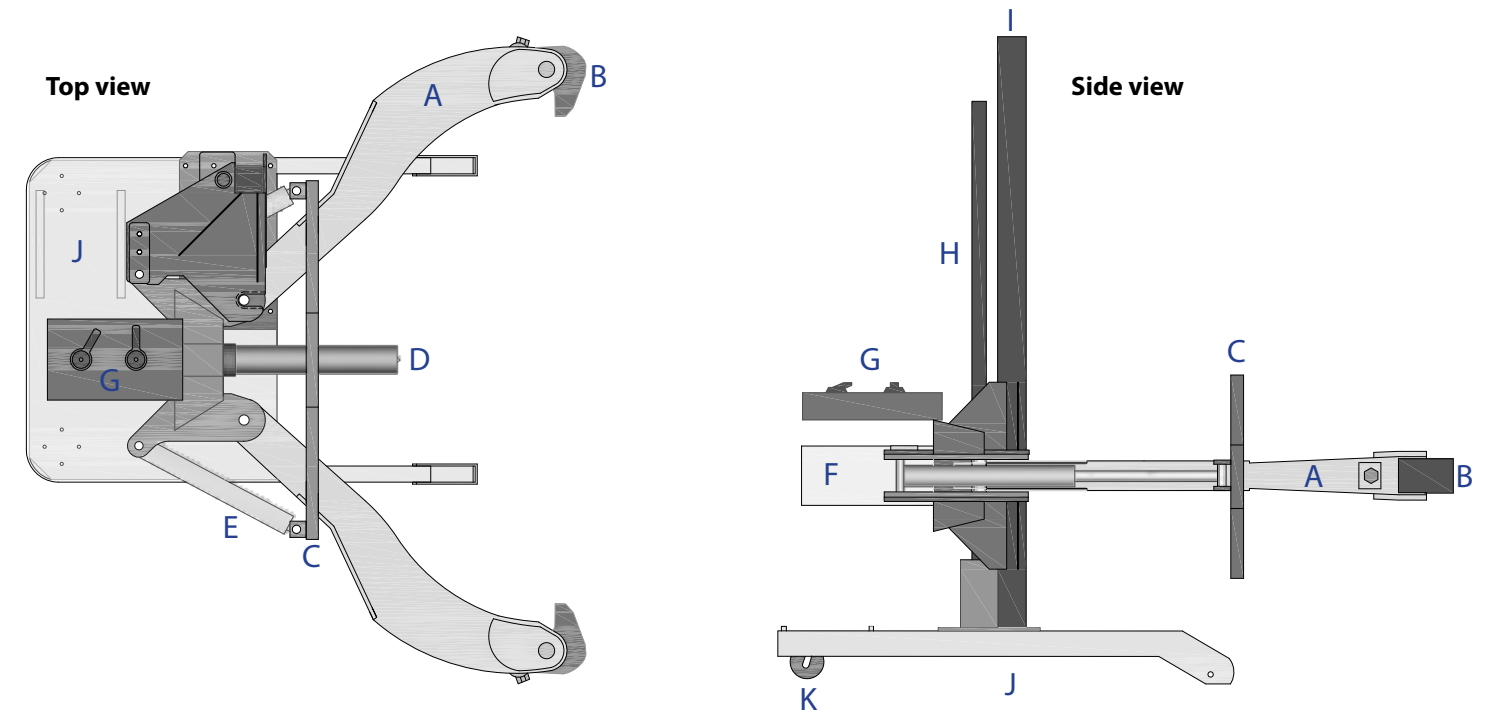


Diagram of a PH-102T

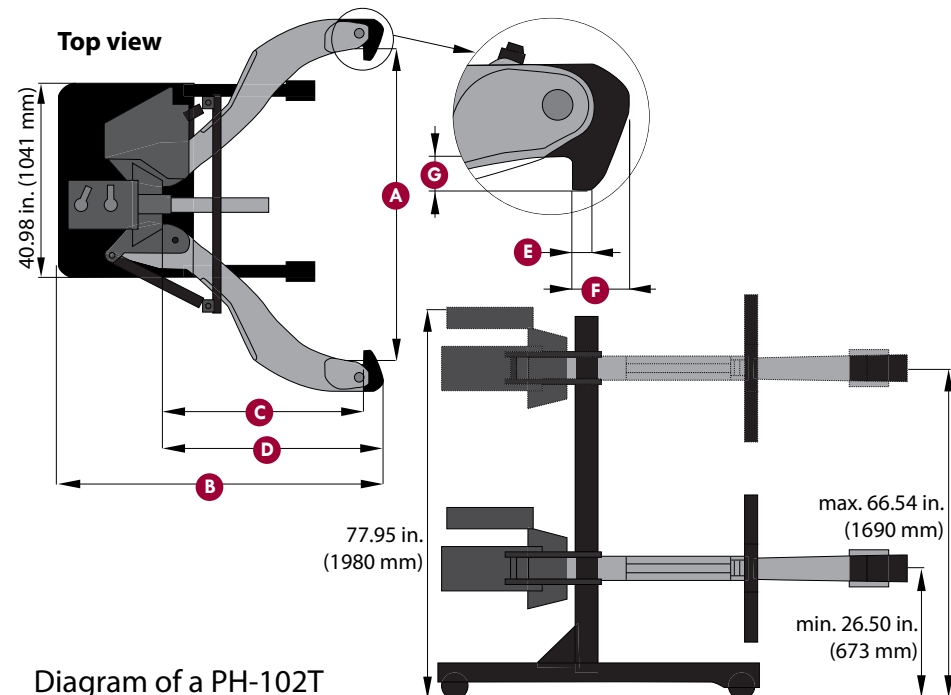


Diagram of a PH-102T

- A.** Jaw
- B.** Jaw Tip
- C.** Cage
- D.** Pushing Adaptor
- E.** Cage Cylinder
- F.** Pushing Cylinder
- G.** Control Valves
- H.** Hoist Cylinder
- I.** Mast
- J.** Base
- K.** Casters

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems


Pushers | Jaw Tips

PUSHERS:


Included with the 100-Ton pullers are THREE pushers and a coupler. String 2 pushers together to increase the reach of the ram. Using a variety of combinations may be necessary to complete the pull of a deeply set gear or bearing.

Included with the 200-Ton puller are FOUR pushers. The diameters are 4 inches. The 200-T does not include a coupler.


HT-1164

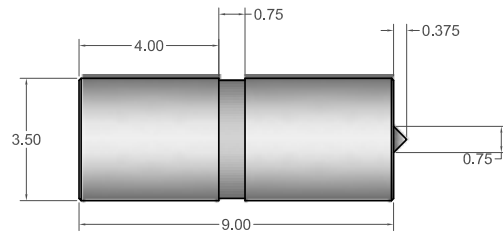

HT-1163



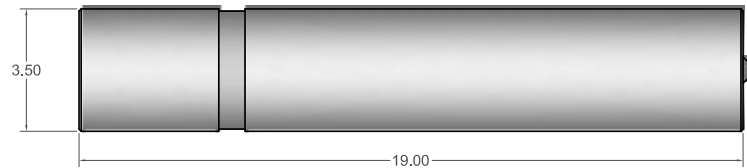


HT-1162

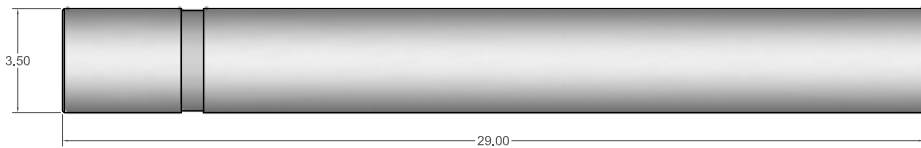

Coupler

*Not included with the 200-Ton.

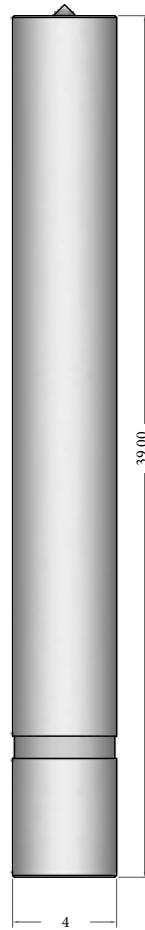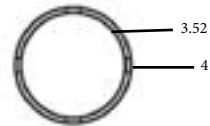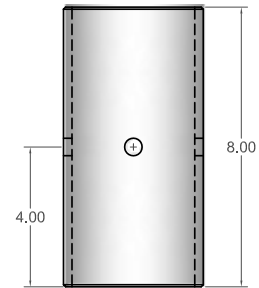


*Included with 200-Ton only.

JAW TIPS:

3 jaw tip sizes are available for 100 and 200 Ton puller models.

- HT-1180: standard with all models.
- HT-1180A: optional, for operations with limited space constraints.
- HT-1180S: optional, for operations with limited space constraints.

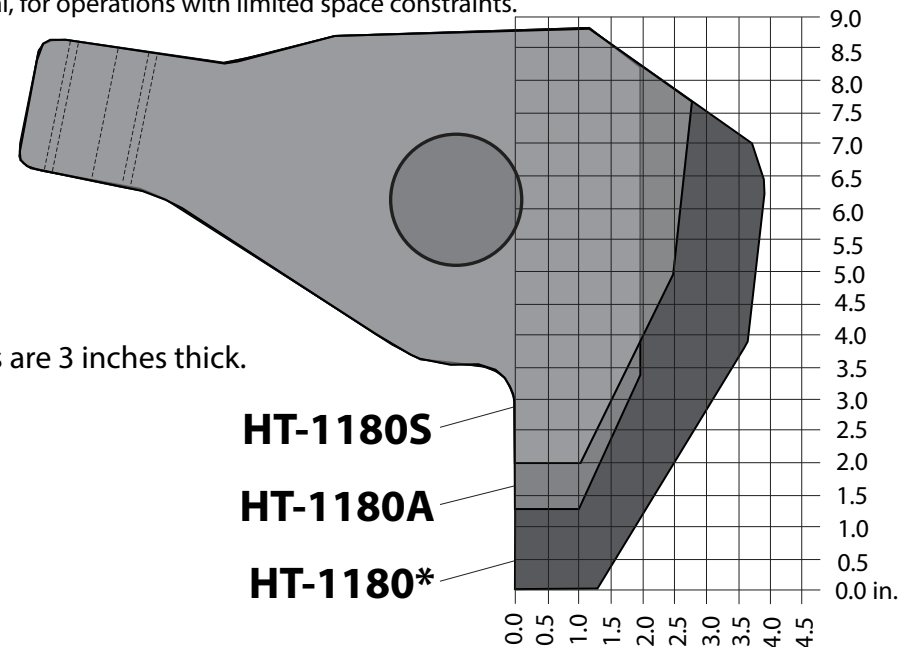

*Tip widths are 3 inches thick.

HT-1180S

HT-1180A

HT-1180*

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Assembly | Adjustments

ASSEMBLY:

1. Ensure that shipping crate firmly rests on level ground in upright position.
2. Open small side panel and confirm that puller is resting firmly in upright position in the crate.
3. Remove remainder of plywood.
4. Inspect puller for any damage that may have been caused by shipping.
5. **Save bolts** that were used to brace the cart. These will be used for securing the included cart wheels to the cart.
6. Inspect hoses for proper ratings. Connect the 10,000 psi hose to the port marked "**10,000 psi only**" on the puller and the pressurized port on the pump. Connect hose with the lower pressure rating to the return port on puller and pump.
7. Fill reservoir of pump with pump manufacturer specified oil. See pump or cylinder manual for details.

ADJUSTMENTS:

RAISING THE PULLER:

1. Place cylinder control valve lever in "Hoist Oil Supply" position.
2. Raise puller by placing remote jog switch in "On" position and opening the puller hoist vertical control valve.
3. Release remote jog switch. Close vertical control valve after reaching desired height.

LOWERING THE PULLER:

1. Place cylinder control valve lever in "Hoist Lower" position.
2. Lower puller by turning puller hoist vertical control valve counterclockwise.
3. Close vertical control valve after reaching desired height.

NOTE:

HOIST TRAVEL SPEED:


The restrictor valve, located at the top of the hoist cylinder, is used to control the rate of puller descent. This valve should be set at the desired rate and locked in place using the nut on the valve shaft.

An appropriate starting point is one full turn from the closed position. This valve is a one-way restrictor only and does not affect the rate at which the puller is raised.


CHANGING THE JAW SPREAD:

If opening/closing the jaws using the standard cage setting does not provide enough spread or does not provide enough closure, use the following adjustments to achieve the maximum and minimum spreads.


1. Support the jaws.
2. Remove 6 cap screws, lock washers and nuts on 1 jaw guide at a time.
3. Slide jaw guide inward/outward on cage 1 bolt hole.
4. Replace 4 cap screws, lock washer, and nuts and tighten appropriately.
5. Reverse this process to return to standard jaw spread.

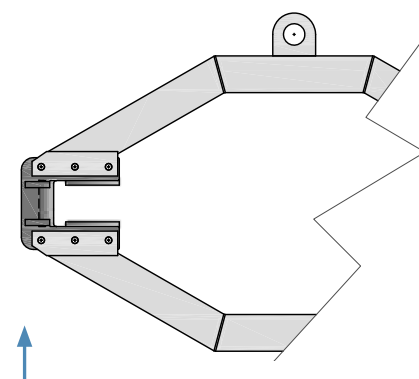

Default jaw guide position when puller is shipped.

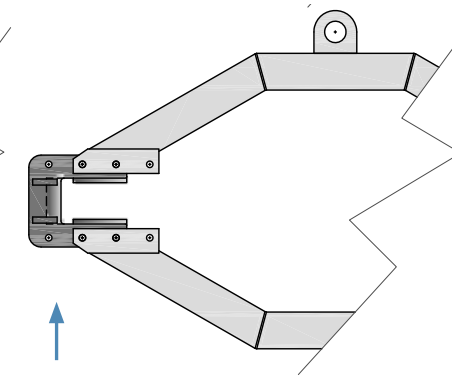

Jaw guide moved 1 bolt hole **OUT** to increase spread.

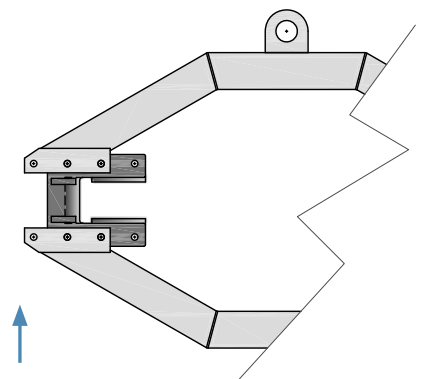

Jaw guide moved 1 bolt hole **IN** to decrease spread.

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems


Adjustments (continued) | Removing puller from cart

ADJUSTING JAW TIPS:


1. Adjust jaw tips by turning 1 ¼" cap screw.

NOTE: Always use maximum pulling surface of jaw. To angle tip inward, turn cap screw clockwise. To angle tip outward, turn cap screw counterclockwise. Before pulling, always make certain machined caps are properly fitted to curved surface.


Correct Alignment

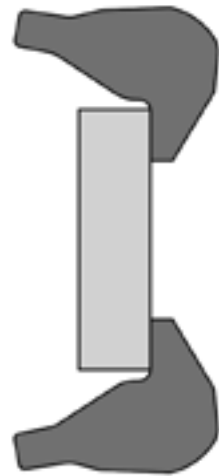

Incorrect

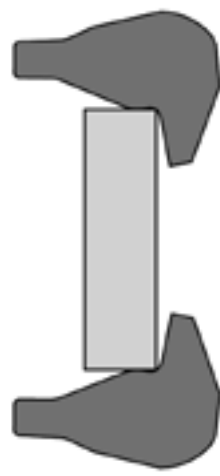

Incorrect

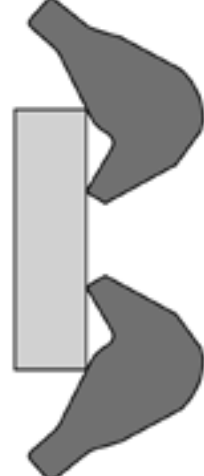

ADJUSTING SLIDE ROLLERS:

1. Lower slide and puller assembly until it rests solidly on base.
2. Loosen 5/8" hex bolt.
3. Move roller using eye bolts on each side of roller.
4. Adjust roller until equal spacing is obtained between mast and slide tube on both roller side and opposite side.
5. Tighten locking nut on eye bolt.
6. Tighten 5/8" hex bolt.

100-TON:

REMOVING PULLER FROM THE CART:

1. Support puller weight using lifting brackets provided.
2. Close puller hoist vertical control valve.
3. Disconnect puller hoist hose coupler at control panel.
4. Remove 2 of the ½" bolts which fasten locking plate to the puller lift bracket.
5. Remove puller from cart by rotating cart while keeping puller stationary.

200-TON:

REMOVING PULLER FROM THE CART:

1. Support puller weight using lifting brackets provided.
2. Close puller hoist vertical control valve.
3. Disconnect puller hoist hose coupler at control panel.
4. On each slide, remove the top and bottom ½" bolts. Do this on both the left and right slide, removing a total of 4 bolts.
5. While keeping the puller supported and balanced, remove from the cart by moving the puller forward.

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Set-up | Pulling an object



OPERATION IMPORTANT: Hydraulic power is one of the safest methods for applying force when used correctly. Be sure to read all instructions, warnings and cautions carefully.

Follow all safety precautions to avoid personal injury or property damage during system operation. Posi Lock cannot be responsible for damage or injury resulting from unsafe use of product, lack of maintenance or incorrect product and/or system operation.

It is important that the operator has a full understanding of all the instructions, warnings, cautions and safety regulations before starting to operate equipment. When in doubt contact Posi Lock at +1-701-797-2600.



MAINTENANCE: Always clean the puller after use and store in a clean, dry place.

SET-UP:

1. Transport the puller by use of the puller cart or forklift.
2. Line the puller up to the workpiece.
3. Open the jaws.



OPENING THE JAWS:

- I. Place cylinder control valve lever in "Oil Supply" position.
- II. Place cage control lever in "Jaw Open" position and activate pump by pushing remote switch to the "On" position to open jaws to the desired spread.

4. Position the workpiece to be removed in between the jaws.
5. Continue to adjust the height until the workpiece and extending cylinder are aligned. See RAISING THE PULLER on page 3.
6. Close the jaws.



CLOSING THE JAWS:

- I. Place cylinder control valve lever in "Oil Supply" position.
- II. Place cage control lever in "Jaw Closed" position and activate pump by pushing remote switch to the "On" position to close jaws to the desired spread or for clamping.

7. Adjust the jaw tips appropriately. See ADJUSTING JAW TIPS on page 4.

PULLING AN OBJECT:

1. Extend the cylinder ram towards the workpiece until there is contact.



EXTENDING CYLINDER:

- I. Place cylinder control valve in "Extend" position.
- II. Activate pump with jog switch.

2. Continue to extend the ram. The workpiece will begin to move gradually off the shaft.
3. Retract the cylinder.
4. Completely remove the workpiece.



RETRACTING CYLINDER:

- I. Place cylinder control valve in the "Retract" position.
- II. Activate pump with jog switch.

NOTE: On a single acting cylinder the cylinder ram will retract without activating the pump.

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems PH-123T Transformation

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems PH-123T Transformation (continued)

1. Starting in a 2-jaw configuration, move the cage cylinder from the 2-jaw position to the 3-jaw position.



2. Remove the jaw on the left from the 2-jaw position.



3. Place the jaw into the lower 3-jaw position.




4. Place jaw from the left 2-jaw position into upper 3-jaw position to complete the transformation.




POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Spread Range

SPREAD RANGE DIAGRAM:

Use the diagram to determine the limitations of the jaw-opening. Spread ranges apply to all POSI LOCK 100-Ton and 200-Ton hydraulic puller systems. Gears, pulleys, wheels, sleeves, and other press fit parts must fit within these limitations.

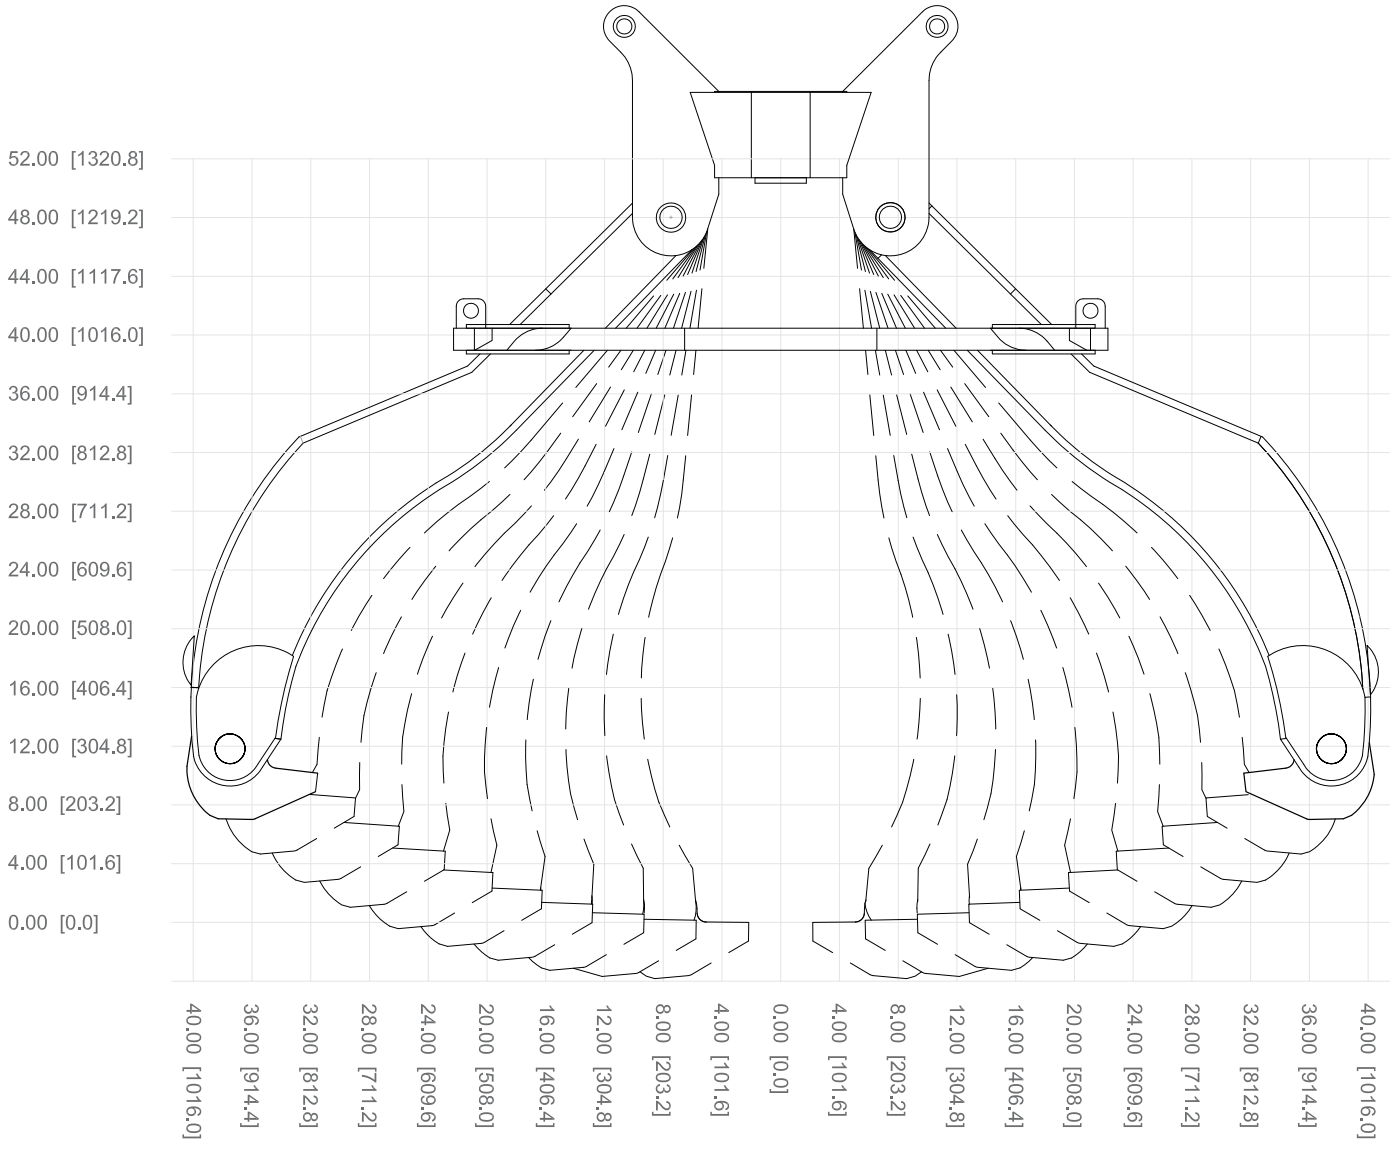



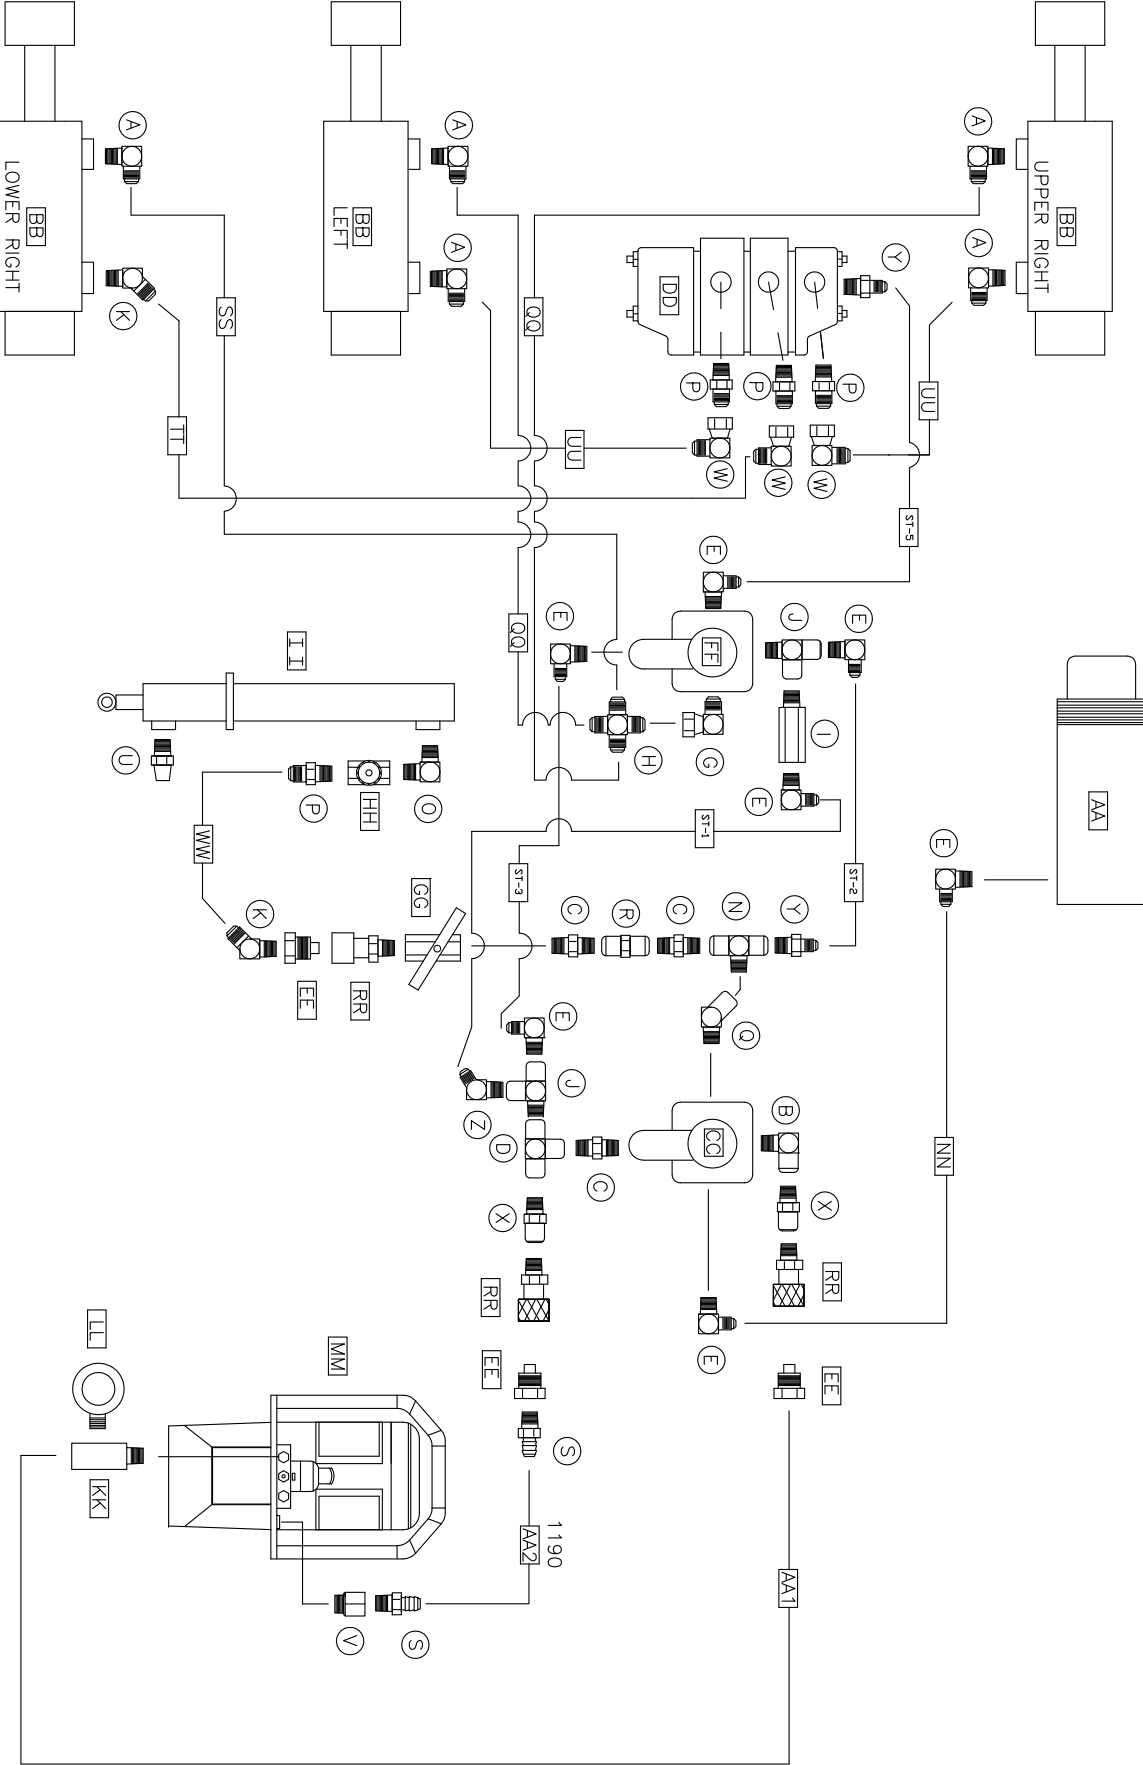



















POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Schematics | PH-100T | PH-123T



POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Hydraulic Fittings | PH-100T | PH123T

| Hydraulic Fittings for 3 Jaw 100-Ton Pullers | | | | |
|---|-----|----------|---|-----|
| | SYM | PART # | DESC. | QTY |
|  | A | HT-1123 | 3/8 Male NPTF x 3/8 Male 37° | 5 |
|  | B | HT-1124 | 3/8 Male NPTF x 3/8 Male 37 NPTF | 1 |
|  | C | HT-1125 | 3/8 Male NPTF x 3/8 Female NPTF | 3 |
|  | D | HT-1126 | 3/8 Female NPTF Tee | 1 |
|  | E | HT-1134 | 3/8 Male NPTF x 1/4 Male 37° | 7 |
|  | G | HT-1128 | 3/8 Male NPTF x 3/8 Female 37° | 1 |
|  | H | HT-1129 | 3/8 Male 37° Cross | 1 |
|  | I | HT-1113 | 3/8 Male NPTF x 3/8 Female NPTF 2000 PSI Relief | 1 |
|  | J | HT-1130 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 2 |
|  | K | HT-1131 | 3/8 Male NPTF x 3/8 37° | 2 |
|  | N | HT-1001 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 1 |
|  | O | HT-1002 | 3/8 Male NPTF x 3/8 Male NPTF | 1 |
|  | P | HT-1003 | 3/8 Male NPTF x 3/8 37° | 4 |
|  | Q | HT-1004 | 3/8 Male NPTF x 3/8 Female NPTF | 1 |
|  | R | HT-1011 | 3/8 Female NPTF x 3/8 Female NPTF | 1 |
|  | S | HT-1191 | 3/8 Male NPTF x 3/8 Male Barbed | 2 |
|  | U | HT-1154 | 3/8 Male NPFT Vent | 1 |
|  | V | HT-1006 | 3/8 Female NPTF x 3/4 BOSS | 1 |
|  | W | HT-1013 | 3/8 Male 37° x 3/8 Female 37° | 3 |
|  | X | HT-1014 | 3/8 Male NPTF x 3/8 Female NPTF | 2 |
|  | Y | HT-1134A | 3/8 Male NPTF x 1/4 Male 37° | 2 |
|  | Z | HT-1134B | 3/8 Male NPTF x 1/4 Male 37° | 1 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Hydraulic Hoses and Components | PH-100T | PH123T


| Hydraulic Hoses and Components for 3 Jaw 100-Ton Pullers | | | | |
|--|-----------|---------------------------|-----|--|
| SYM | PART # | DESC. | QTY | |
| AA | PH10010 | 100-Ton Cylinder | 1 | |
| BB | HT-1103 | 3-Ton Cylinder | 3 | |
| CC | HT-VC4 | 4-Way Valve | 1 | |
| DD | HT-1114 | 3 Section Flow Divider | 1 | |
| EE | FHCH-38M | Male Coupler | 3 | |
| FF | HT-VC20 | 4-Way Closed Center Valve | 1 | |
| GG | HT-V82 | Needle Valve | 1 | |
| HH | HT-1121 | 1-Way Valve | 1 | |
| II | HT-1117 | Hoist Cylinder | 1 | |
| KK | HT-GA3 | Gauge Adaptor | 1 | |
| LL | PGB254TLM | 10,000 PSI Gauge | 1 | |
| MM | PH-2022 | Pump | 1 | |
| NN | HT-1135 | 16" 10,000 PSI Hose | 1 | |
| QQ | HT-1139 | 33" Hose | 2* | |
| RR | FHCH-38F | Female Coupler | 3 | |
| SS | HT-1140 | 44" Hose | 1** | |
| TT | HT-1141 | 21" Hose | 1 | |
| UU | HT-1142A | 15" Hose | 2 | |
| WW | HT-1005 | 30" Hose | 1 | |
| AA1 | PH-927 | 10' 10,000 PSI Hose | 1 | |
| AA2 | HT-1190 | 10' Return Hose | 1 | |
| ST-1 | HT-ST1 | Steel Line | 1 | |
| ST-2 | HT-ST2 | Steel Line | 1 | |
| ST-3 | HT-ST3 | Steel Line | 1 | |
| ST-4 | HT-ST4 | Steel Line | 1 | |

SPECIAL NOTES:

* 1- 33" hose is included for the 2/3 jaw combination puller.

** 2- 44" hoses are included with the 2/3 jaw combination puller.

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Schematics | PH-102T

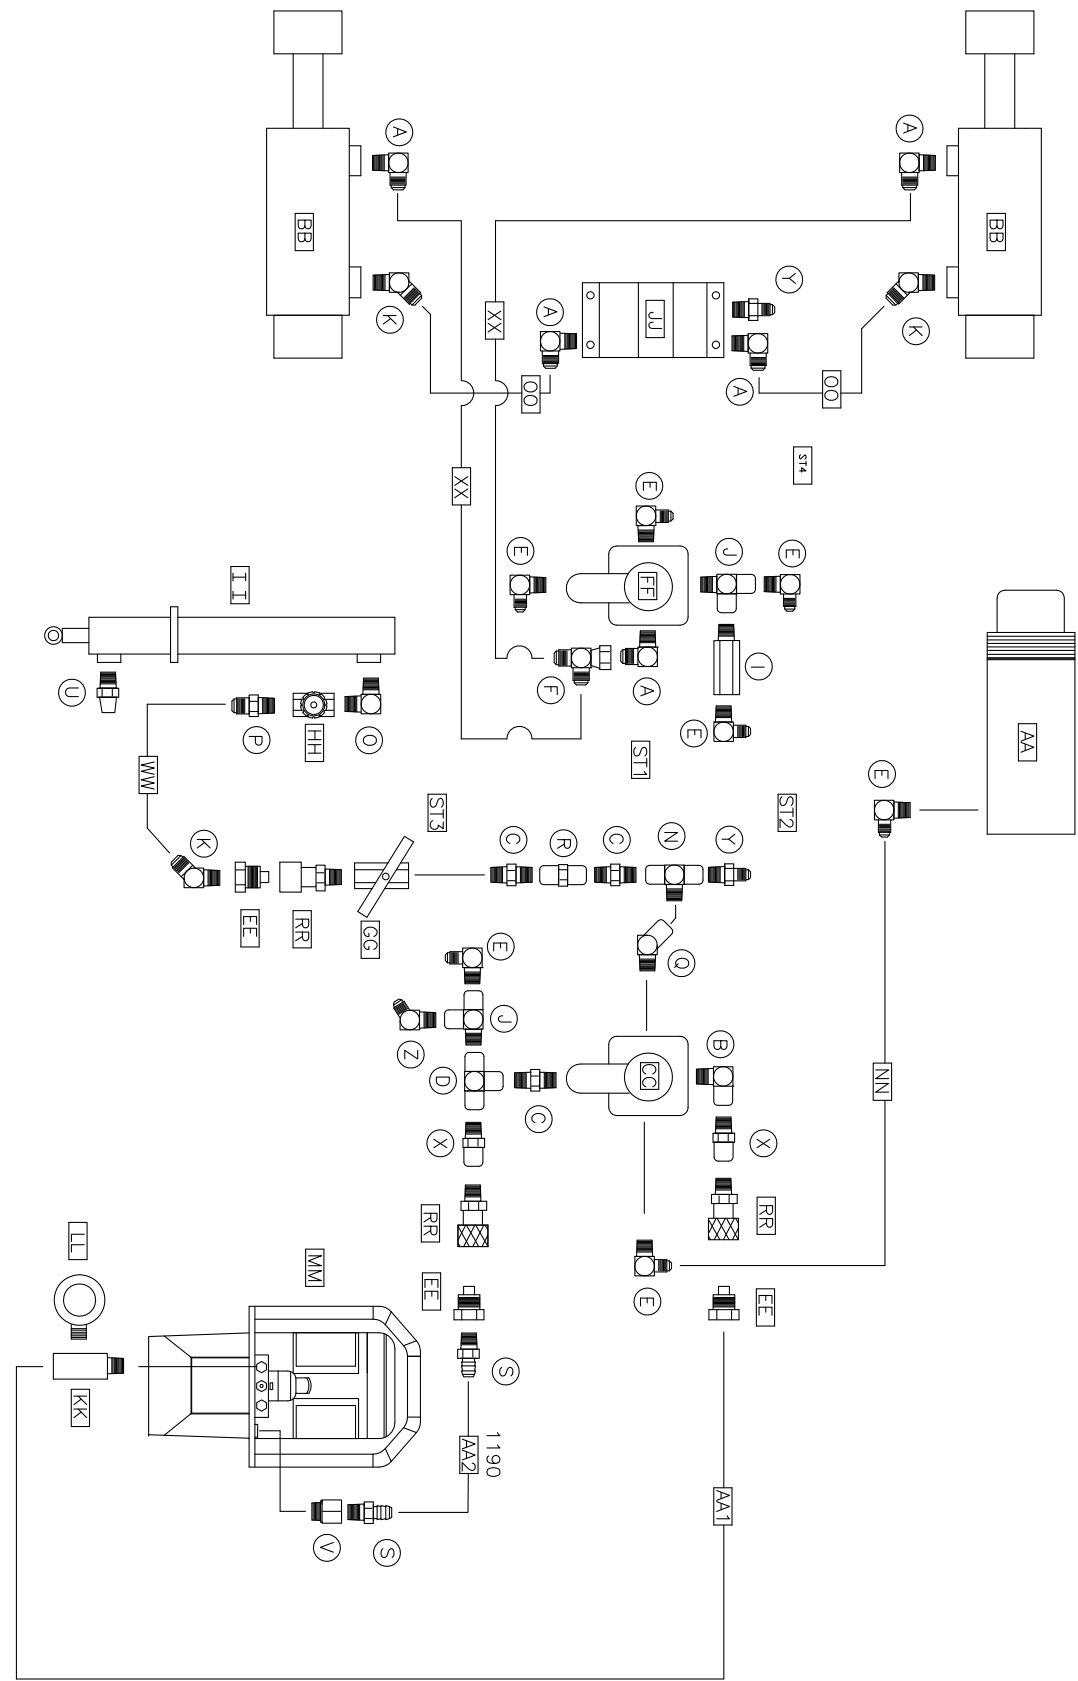

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Hydraulic Fittings, Hoses and Components | PH-102T

| Hydraulic Fittings for 2 Jaw Pullers | | | | |
|--------------------------------------|-----|----------|---|-----|
| | SYM | PART # | DESC. | QTY |
| | A | HT-1123 | 3/8 Male NPTF x 3/8 Male 37° | 5 |
| | B | HT-1124 | 3/8 Male NPTF x 3/8 Male 37 NPTF | 1 |
| | C | HT-1125 | 3/8 Male NPTF x 3/8 Female NPTF | 3 |
| | D | HT-1126 | 3/8 Female NPTF Tee | 1 |
| | E | HT-1134 | 3/8 Male NPTF x 1/4 Male 37° | 7 |
| | F | HT-1127 | 3/8 Male 37° x 3/8 Female 37° x 3/8 Male 37° | 1 |
| | I | HT-1113 | 3/8 Male NPTF x 3/8 Female NPTF 2000 PSI Relief | 1 |
| | J | HT-1130 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 2 |
| | K | HT-1131 | 3/8 Male NPTF x 3/8 37° | 3 |
| | N | HT-1001 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 1 |
| | O | HT-1002 | 3/8 Male NPTF x 3/8 Male NPTF | 1 |
| | P | HT-1003 | 3/8 Male NPTF x 3/8 37° | 1 |
| | Q | HT-1004 | 3/8 Male NPTF x 3/8 Female NPTF | 1 |
| | R | HT-1011 | 3/8 Female NPTF x 3/8 Female NPTF | 1 |
| | S | HT-1191 | 3/8 Male NPTF x 3/8 Male Barbed | 2 |
| | U | HT-1154 | 3/8 Male NPFT Vent | 1 |
| | V | HT-1006 | 3/8 Female NPTF x 3/4 BOSS | 1 |
| | X | HT-1014 | 3/8 Male NPTF x 3/8 Female NPTF | 2 |
| | Y | HT-1134A | 3/8 Male NPTF x 1/4 Male 37° | 2 |
| | Z | HT-1134B | 3/8 Male NPTF x 1/4 Male 37° | 1 |


POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Hydraulic Fittings, Hoses and Components | 102T







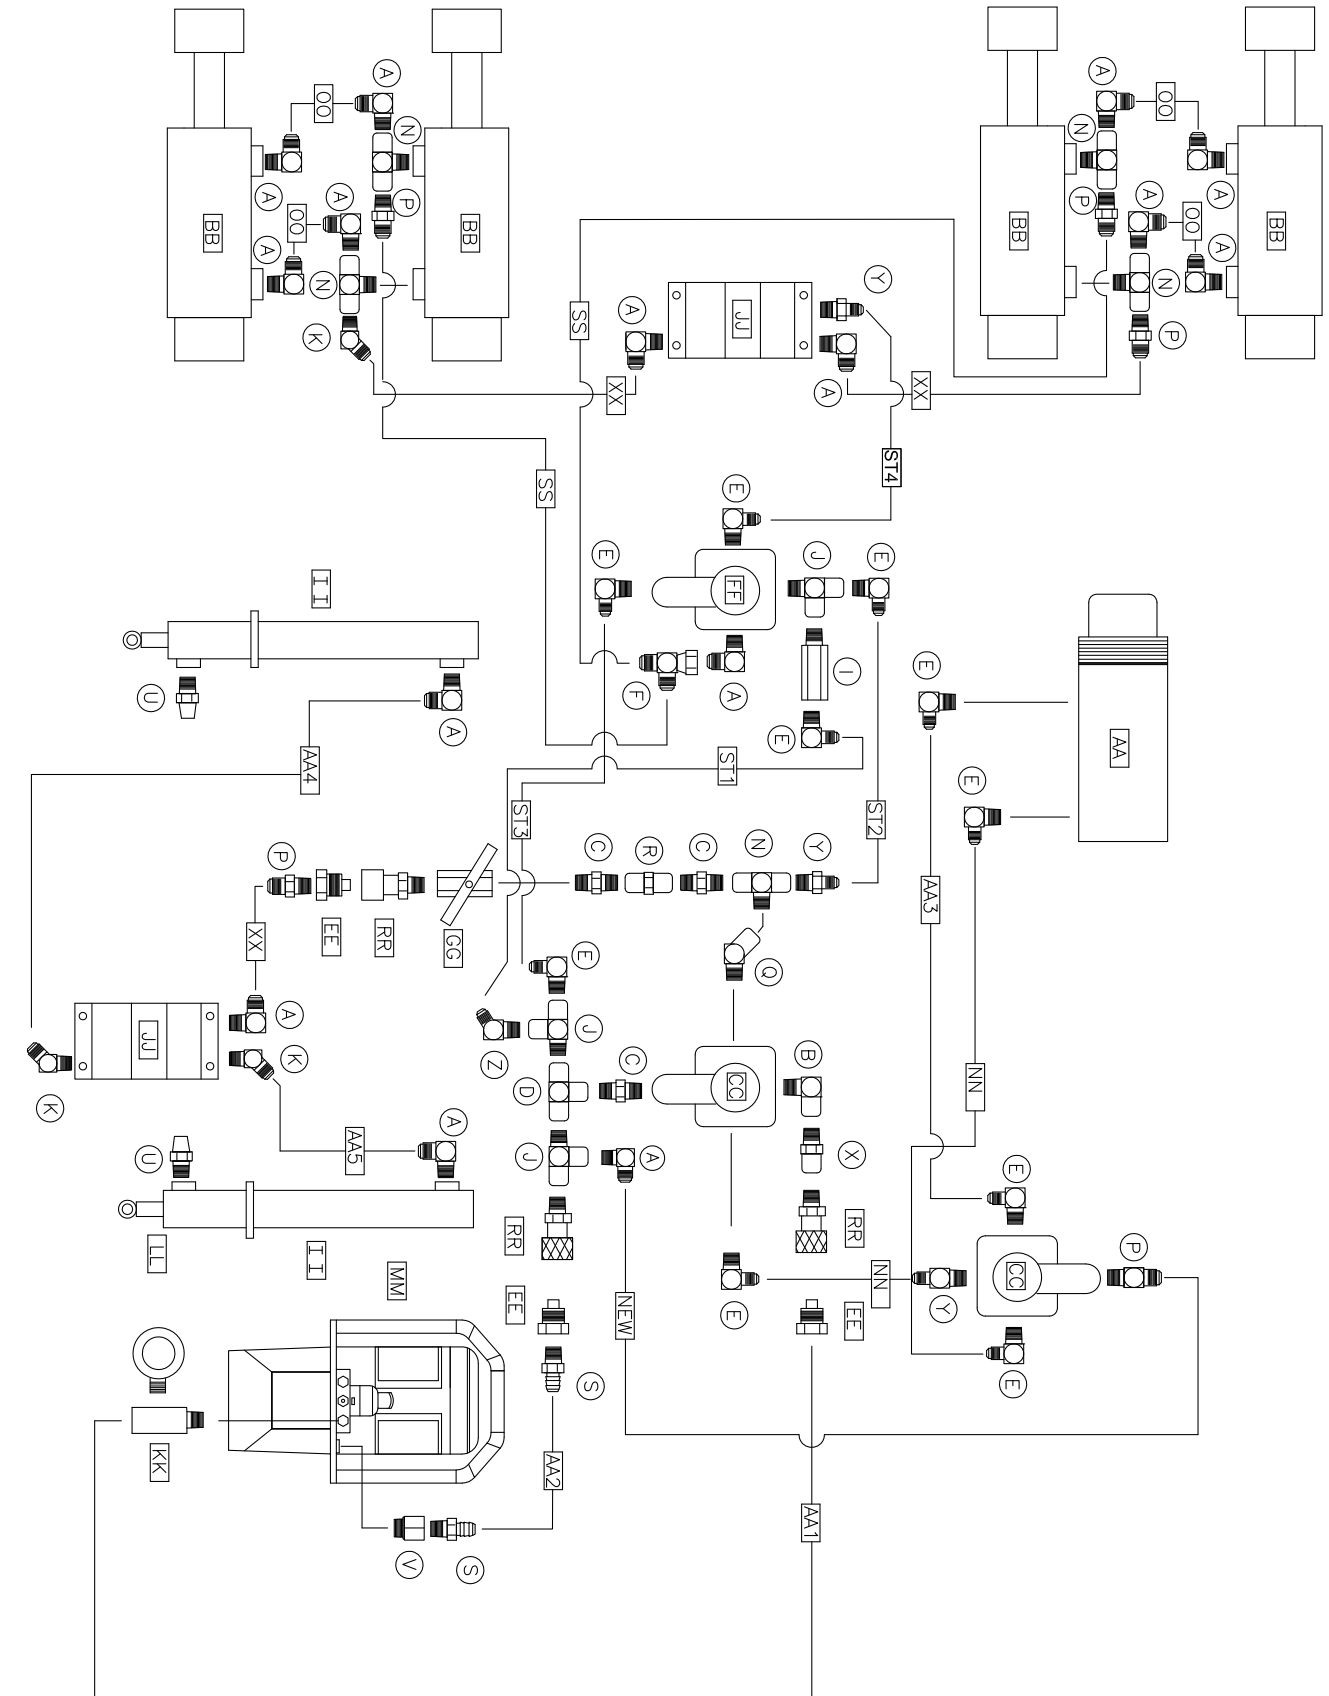












| Hydraulic Hoses and Components for 2 Jaw 100-Ton Pullers | | | |
|--|-----------|---------------------------|-----|
| SYM | PART # | DESC. | QTY |
| AA | PH10010 | 100-Ton Cylinder | 1 |
| BB | HT-1103 | 3-Ton Cylinder | 2 |
| CC | HT-VC4 | 4-Way Valve | 1 |
| EE | FHCH-38M | Male Coupler | 3 |
| FF | HT-VC20 | 4-Way Closed Center Valve | 1 |
| GG | HT-V82 | Needle Valve | 1 |
| HH | HT-1121 | 1-Way Valve | 1 |
| II | HT-1117 | Hoist Cylinder | 1 |
| JJ | HT-1187 | 2 Section Flow Divider | 1 |
| KK | HT-GA3 | Gauge Adaptor | 1 |
| LL | PGB254TLM | 10,000 PSI Gauge | 1 |
| MM | PH-2022 | Pump | 1 |
| NN | HT-1135 | 16" 10,000 PSI Hose | 1 |
| OO | HT-1136 | 12 1/4" Hose | 2 |
| RR | FHCH-38F | Female Coupler | 3 |
| WW | HT-1005 | 30" Hose | 1 |
| XX | HT-1139 | 33" Hose | 2 |
| AA1 | PH-927 | 10' 10,000 PSI Hose | 1 |
| AA2 | HT-1190 | 10' Return Hose | 1 |
| ST-1 | HT-ST1 | Steel Line | 1 |
| ST-2 | HT-ST2 | Steel Line | 1 |
| ST-3 | HT-ST3 | Steel Line | 1 |
| ST-4 | HT-ST4 | Steel Line | 1 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Schematics | PH-200T



**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Hydraulic Fittings | PH-200T**

| Hydraulic Fittings for 200-Ton Puller | | | | |
|---|-----|----------|---|-----|
| | SYM | PART # | DESC. | QTY |
|  | A | HT-1123 | 3/8 Male NPTF x 3/8 Male 37° | 15 |
|  | B | HT-1124 | 3/8 Male NPTF x 3/8 Male 37 NPTF | 1 |
|  | C | HT-1125 | 3/8 Male NPTF x 3/8 Female NPTF | 3 |
|  | D | HT-1126 | 3/8 Female NPTF Tee | 1 |
|  | E | HT-1134 | 3/8 Male NPTF x 1/4 Male 37° | 10 |
|  | F | HT-1127 | 3/8 Male 37° x 3/8 Female 37° x 3/8 Male 37° | 1 |
|  | I | HT-1113 | 3/8 Male NPTF x 3/8 Female NPTF 2000 PSI Relief | 1 |
|  | J | HT-1130 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 3 |
|  | K | HT-1131 | 3/8 Male NPTF x 3/8 37° | 3 |
|  | N | HT-1001 | 3/8 Male NPTF x 3/8 Female NPTF x 3/8 Female NPTF | 5 |
|  | P | HT-1003 | 3/8 Male NPTF x 3/8 37° | 5 |
|  | Q | HT-1004 | 3/8 Male NPTF x 3/8 Female NPTF | 1 |
|  | R | HT-1011 | 3/8 Female NPTF x 3/8 Female NPTF | 1 |
|  | S | HT-1191 | 3/8 Male NPTF x 3/8 Male Barbed | 2 |
|  | U | HT-1154 | 3/8 Male NPFT Vent | 2 |
|  | V | HT-1006 | 3/8 Female NPTF x 3/4 BOSS | 1 |
|  | X | HT-1014 | 3/8 Male NPTF x 3/8 Female NPTF | 1 |
|  | Y | HT-1134A | 3/8 Male NPTF x 1/4 Male 37° | 3 |
|  | Z | HT-1134B | 3/8 Male NPTF x 1/4 Male 37° | 1 |

**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Hydraulic Hoses and Components | PH-200T**

| Hydraulic Hoses and Components for 200-Ton Puller | | | | |
|---|-----------|---------------------------|-----|--|
| SYM | PART # | DESC. | QTY | |
| AA | PH20013 | 200-Ton Cylinder D/A | 1 | |
| BB | HT-1103 | 3-Ton Cylinder | 4 | |
| CC | HT-VC4 | 4-Way Valve | 2 | |
| EE | FHCH-38M | Male Coupler | 3 | |
| FF | HT-VC20 | 4-Way Closed Center Valve | 1 | |
| GG | HT-V82 | Needle Valve | 1 | |
| II | HT-1117 | Hoist Cylinder | 2 | |
| JJ | HT-1187 | 2 Section Flow Divider | 2 | |
| KK | HT-GA3 | Gauge Adaptor | 1 | |
| LL | PGB254TLM | 10,000 PSI Gauge | 1 | |
| MM | PH-2022 | Pump | 1 | |
| NN | HT-1135 | 16" 10,000 PSI Hose | 2 | |
| OO | HT-1136 | 12 1/4" Hose | 4 | |
| RR | FHCH-38F | Female Coupler | 3 | |
| SS | HT-1140 | 46" Hose | 2 | |
| XX | HT-1139 | 33" Hose | 3 | |
| AA1 | PH-927 | 10' 10,000 PSI Hose | 1 | |
| AA2 | HT-1190 | 10' Return Hose | 1 | |
| AA3 | HT-1135-7 | 23" 10,000 PSI Hose | 1 | |
| AA4 | HT-34 | 34" Hose with 3" Elbow | 1 | |
| AA5 | HT-78 | 78" Hose | 1 | |
| ST-1 | HT-ST1 | Steel Line | 1 | |
| ST-2 | HT-ST2 | Steel Line | 1 | |
| ST-3 | HT-ST3 | Steel Line | 1 | |
| ST-4 | HT-ST4 | Steel Line | 11 | |

**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Parts List**

| PART # | DESC. | QUANTITY | | |
|---------|-------------------------------|-----------|------|------|
| | | 100T/123T | 102T | 200T |
| HT-1001 | Fitting N 6 fp-fp-mp | 1 | 1 | 5 |
| HT-1002 | Fitting O 6MP-6MP90 | 1 | 1 | - |
| HT-1003 | Fitting P 8MJ-6MP | 4 | 1 | 5 |
| HT-1004 | Fitting Q 6MP-6FP45 | 1 | 1 | - |
| HT-1005 | Hose WW-115 30" | 1 | 1 | - |
| HT-1006 | Fitting 3/4" male 3/8 FP | 1 | - | 1 |
| HT-1011 | Fitting R 6FP-6FP | 1 | 1 | 1 |
| HT-1013 | Fitting 1/2" MJ X1/2 FJ80 | 3 | - | - |
| HT-1014 | Fitting 13/8" MP X 3/8" FP | 2 | 2 | 1 |
| HT-1015 | 5/8" hex lock nut | 4 | 4 | 4 |
| HT-1016 | 1/2" hex nut | 29 | 23 | 32 |
| HT-1017 | 1/2" lock washer | 25 | 19 | 30 |
| HT-1018 | 3/8" hex nut | 12 | 8 | - |
| HT-1019 | 3/8" lock washer | 12 | 12 | - |
| HT-1020 | 1/4" lock washer | 4 | 4 | 6 |
| HT-1021 | 1/4" flat washer | 4 | 4 | - |
| HT-1022 | 3/8" hex Lock nut | 4 | 4 | 8 |
| HT-1023 | 3/8" flat washer | 4 | 4 | - |
| HT-1024 | 5/16"X1 hex head cap screw | - | 4 | 12 |
| HT-1025 | 5/16" hex nut | - | 4 | 8 |
| HT-1026 | 5/16" lock washer | - | 4 | 12 |
| HT-1027 | 5/16" flat washer | - | 4 | - |
| HT-1028 | 5/8"X6" hex cap screw grade 8 | 2 | 2 | 4 |
| HT-1051 | 1/4"X3/4" hex cap screw | 4 | 4 | 6 |
| HT-1052 | 1/2"X 1-1/2" hex cap screw | 3 | 3 | 18 |
| HT-1053 | 1/2"X1/4" sock head cap screw | 2 | 2 | - |
| HT-1054 | 1/2X1/2 Socket set screw | 1 | 1 | 1 |
| HT-1057 | Decal (hoist oil) | 1 | 1 | 1 |
| HT-1058 | Self drilling screws | 8 | 6 | 8 |
| HT-1103 | 3 -Ton cylinder # 2016 | 3 | 2 | 4 |
| HT-1104 | Jaw | 3 | 2 | 4 |
| HT-1105 | Jaw head for 3 jaw | 1 | - | - |

**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Parts List (continued)**

| PART # | DESC. | QUANTITY | | |
|-------------|------------------------------|-----------|------|------|
| | | 100T/123T | 102T | 200T |
| HT-1106A | Pin (1" X 4-1/8") | 4 | 3 | 6 |
| HT-1106A-23 | Pin (1" X 4-1/8") not plated | - | - | 1 |
| HT-1106B | Pin (1" X 6-1/2") | 1 | 1 | - |
| HT-1106C | Pin (1"X 5-1/4") | 2 | 1 | - |
| HT-1107 | 1" external snap ring | 14 | 10 | 16 |
| HT-1111 | Cart | 1 | 1 | - |
| HT-1111A | Mast | 1 | 1 | - |
| HT-1111B | Slide (puller holder) | 1 | 1 | - |
| HT-1113 | Relief valve #RV-38-K-2000 | 1 | - | 1 |
| HT-1114 | Flow divider 3 jaw and combo | 1 | 1 | - |
| HT-1117 | Mast Cylinder #1540 | 1 | 1 | 2 |
| HT-1117B | Roller adjuster | 4 | 4 | 8 |
| HT-1118B | Bushing | 2 | 2 | 4 |
| HT-1119B | Roller | 2 | 2 | 4 |
| HT-1121 | Flow control valve | 1 | 1 | - |
| HT-1123 | Fitting A 6mp-8mj90 | 5 | 5 | 15 |
| HT-1124 | Fitting B 6mp-fp90 | 1 | 1 | 1 |
| HT-1125 | Fitting C 6mp-6mp | 3 | 3 | 3 |
| HT-1126 | Fitting D 6fpt | 1 | 1 | 1 |
| HT-1127 | Fitting F 8fjx-8mj-8mj | 0 | 1 | 1 |
| HT-1128 | Fitting G 6mp-8fjx90 | 1 | - | - |
| HT-1129 | Fitting H 8mj-cross | 1 | - | - |
| HT-1130 | Fitting J 6fp-6mp-6fp | 2 | 2 | 3 |
| HT-1131 | Fitting K 6mp-8mj45 | 2 | 3 | 3 |
| HT-1134 | Fitting E 6mp-6mj90 | 7 | 7 | 10 |
| HT-1134A | Straight fitting 6mp-6mj | 2 | 2 | 2 |
| HT-1134B | 45 degree fitting 6mp-6mj45 | 1 | 1 | 2 |
| HT-1135 | Hose NN-101 15" high jack | 1 | 1 | - |
| HT-1135-7 | Hose NN-101-23" high jack | - | - | 2 |
| HT-1135-15 | Hose AA6-101-32" high jack | - | - | 1 |
| HT-1136 | OO hose-103 12.25" | - | 1 | 4 |
| HT-1139 | XX-112 33" hose | 2 | 2 | 3 |

**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Parts List (continued)**

| PART # | DESC. | QUANTITY | | |
|-----------|--------------------------------|-----------|------|------|
| | | 100T/123T | 102T | 200T |
| HT-1142A | Hose YY-116 15" | 2 | - | - |
| HT-1144 | Decal 100-Ton | 1 | - | - |
| HT-1145 | Decal, 100-Ton cyl/sup oil | 1 | 1 | 1 |
| HT-1146 | Decal, lift area | 2 | 2 | 4 |
| HT-1147 | Decal, 10,000 PSI | 1 | 1 | 1 |
| HT-1148 | Decal, jaw area | 2 | 2 | 4 |
| HT-1149 | Decal, return oil | 1 | 1 | 1 |
| HT-1150 | Decal, 100-Ton 2 jaw | - | 1 | - |
| HT-1153 | Control cover | 1 | 1 | 1 |
| HT-1154 | 3/8" male vent #4450K3 | 1 | 1 | 2 |
| HT-1155 | Caster | 2 | 2 | - |
| HT-1156 | Wheel | 2 | 2 | - |
| HT-1158 | Cage rail w/o eyelet 3-2/3jaw | 2 | - | - |
| HT-1159 | Jaw guide | 3 | 2 | - |
| HT-1160A | Pin (1-1/2" X 5 1/4") | 2 | 1 | - |
| HT-1160-B | Pin (1-1/2" X 6") | 1 | 1 | - |
| HT-1161 | 1-1/2" external snap ring | 6 | 4 | 4 |
| HT-1162 | Pusher 3-1/2" X 29" | 1 | 1 | - |
| HT-1163 | Pusher 3-1/2" X 19" | 1 | 1 | - |
| HT-1164 | Pusher 3-1/2" X 9" | 1 | 1 | - |
| HT-1165 | 1/2" X 4" hex cap screw | 4 | 4 | - |
| HT-1166 | 3/8" X 3" hex cap screw | 8 | 8 | - |
| HT-1167 | Plate, Puller Lock | 1 | 1 | - |
| HT-1168 | Cage rail for Combo 2/3 only | 2 | - | - |
| HT-1170 | Control valve mounting bracket | 1 | 1 | 1 |
| HT-1171 | 1/2" X 2-1/2" hex cap screw | 18 | 12 | - |
| HT-1172 | Cage rail w/eyelet 3-2/3 jaw | 1 | - | - |
| HT-1175 | 5/8" X 4" hex cap screw | 2 | 2 | - |
| HT-1176 | Decal, hoist valve/oil | 1 | 1 | 1 |
| HT-1178 | Decal, cage control | 1 | 1 | 1 |
| HT-1180 | Jaw end | 3 | 2 | 4 |
| HT-1181 | Pin (2" X 6") | 3 | 2 | - |
| HT-1182 | 2" external snap ring | 6 | 4 | 4 |

**POSI LOCK® 100-TON & 200-TON
Hydraulic Puller Systems
Parts List (continued)**

| PART # | DESC. | QUANTITY | | |
|------------|--------------------------------|-----------|------|------|
| | | 100T/123T | 102T | 200T |
| HT-1187 | Flow divider for 2 jaw | - | 1 | 2 |
| HT-1190 | 10' return hose | 1 | 1 | 1 |
| HT-1191 | Barbed male hose end | - | - | 2 |
| HT-1199 | Adapter for pusher | 1 | 1 | - |
| HT-1205 | Jaw head for 2 jaw | - | 1 | - |
| HT-1206 | Cage rail w/ eyelet (2 jaw) | - | 1 | - |
| HT-1207 | Cage rail w/o eyelet (2 jaw) | - | 1 | - |
| HT-1208 | Coupler for pusher | 1 | 1 | - |
| HT-20013 | 200 -Ton cylinder D/A | - | - | 1 |
| HT-2005A | Hose AA4 - 34" with 3" elbow | - | - | 1 |
| HT-2005B | Hose AA5 - 78" | - | - | 1 |
| HT-2159 | 200-Ton jaw guide | - | - | 2 |
| HT-2160A | Pin 1 1/2 x 13 13/16 | - | - | 2 |
| HT-2162 | 200-Ton pusher 29" | - | - | 1 |
| HT-2163 | 200-Ton pusher 19" | - | - | 1 |
| HT-2164 | 200-Ton pusher 9" | - | - | 1 |
| HT-2181 | Pin 2 x 12 3/16 | - | - | 2 |
| HT-2199 | Adaptor for pushers | - | - | 1 |
| HT-2204 | 3-Ton cylinder spacer | - | - | 2 |
| HT-2204-1 | 3-Ton cylinder spacer | - | - | 4 |
| HT-2206 | 200-Ton upper cage | - | - | 1 |
| HT-2207 | 200-Ton lower cage | - | - | 1 |
| HT-2210 | Jaw guide spacer | - | - | 8 |
| HT-2405 | Jaw head for 200-Ton puller | - | - | 1 |
| HT-9306K34 | Bumper stops | - | - | 2 |
| HT-2150 | Decal, 200-Ton 4 jaw | - | - | 1 |
| HT-2171 | 1/2" x 3 1/4" hex head cap SCR | - | - | 12 |
| UW16 | 1" Dia. hardened washer | - | - | 2 |
| HT-1029 | 1" x 1 1/4" hex head cap SCR | - | - | 2 |
| HT-1030 | 1" lock washer | - | - | 2 |
| HT-2170DA | Control valve nounting bracket | - | - | 1 |
| HT-2106B | Pin 1 x 12 1/2" | - | - | 2 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems


Parts List (continued)

| PART # | DESC. | QUANTITY | | |
|-----------|---------------------------|-----------|------|------|
| | | 100T/123T | 102T | 200T |
| HT-2111AR | 200-Ton Mast | - | - | 1 |
| HT-2112 | 200-Ton Puller Slide | - | - | 2 |
| HT-ST1 | Steel Tube | 1 | 1 | 1 |
| HT-ST2 | Steel Tube | 1 | 1 | 1 |
| HT-ST3 | Steel Tube | 1 | 1 | 1 |
| HT-ST4 | Steel Tube | - | 1 | 1 |
| HT-ST5 | Steel Tube | 1 | 1 | - |
| HT-VC4 | 4-Way Valve | 1 | 1 | 2 |
| HT-CH604 | Male Coupler | - | - | 3 |
| HT-VC20 | 4-Way Closed Center Valve | 1 | 1 | 1 |
| HT-V82 | Needle Valve | 1 | 1 | 1 |
| HT-CR400 | Female Coupler | - | - | 3 |
| PH-10010 | 100-Ton Cylinder | 1 | 1 | - |
| PH-2022 | Electric Pump | 1 | 1 | |
| PGB254TLM | Gauge | 1 | 1 | 1 |
| HT-GA3 | Gauge Adapter | 1 | 1 | 1 |
| PH-411 | Dust Cap | 3 | 3 | - |
| PH-927 | Hose 10' | 1 | - | 1 |
| FHCH-38M | Male Coupler | 3 | 3 | - |
| FHCH-38F | Female Coupler | 3 | 3 | - |
| | 200-Ton Hydraulic Pump | - | - | 1 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems

Flow Dividers

Delta Power Rotary Flow Divider, Positive Displacement

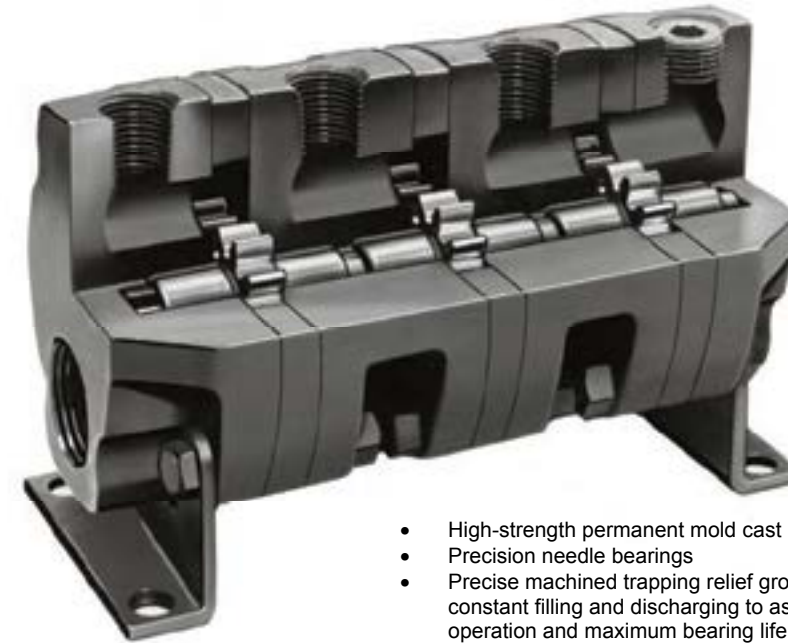


- High-strength permanent mold cast iron housing
- Precision needle bearings
- Precise machined trapping relief grooves provide constant filling and discharging to assure quiet operation and maximum bearing life.
- O-ring seals between sections (Buna-N)


Delta Series P geared flow dividers, accurately divide flow from a single hydraulic source into two or more equal or *proportionate* circuits. In like manner, the input pressure required will be proportional to levels of flow/pressure out of the flow divider, rather than at the highest pressure level, thereby saving what would normally be wasted energy. Proven design, stable material selection and precision machining are the Delta keys to reliable performance you can depend on in a variety of applications.

Application Suggestions


1. For greatest efficiency and accuracy, flow dividers should be used at near maximum rated inlet gallonage. For quieter operations, lowered RPM should be considered.
2. Maximum (3500) and minimum 500 RPM; inlet pressure ratings and differential pressure ratings should be followed.
3. Provide over-pressure protection (relief valves) in each circuit.
4. When designing flow dividers into a static circuit, remember that they are *dynamic* devices which do nothing while static.
5. Use SAE 10 through SAE 30 industrial petroleum-based hydraulic oil with 200 SSU viscosity; filter to 25 microns.
6. Do not use teflon tape in installation. Use plastic pipe sealant with NPTF ports.

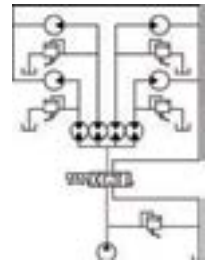


Where one pump operates a number of hydraulic motors: car wash systems lubrication systems (multiple point), hydraulic motor driven machines, (harvesting machinery, etc.)

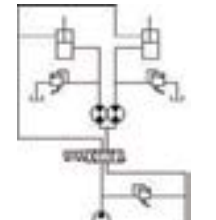

Where two or more cylinders must be synchronized: lift platforms, scaffolds, presses.

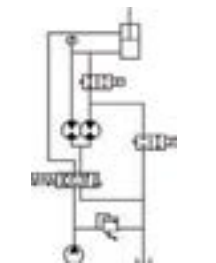

Where main pump pressure must be intensified in one circuit of multiple circuit machinery, such as waste compactors and other hi-lo applications.

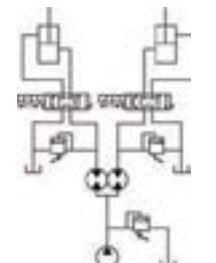

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Flow Dividers

Application Data

The Delta flow divider is a positive displacement flow dividing or proportioning apparatus. It will divide the flow from one source into two or more equal or proportionate circuits, and intensify or reduce the pressure level as required. Note that these flow dividers will operate in reverse in a combine mode, but in that mode, the accuracy likely would be significantly reduced.

In its basic configuration, the unit consists of a number of inter coupled gear type hydraulic pump motors. Each section must be capable of performing the pumping or motoring function. The section have a common inlet and separate outlets. Fluid from a prime source, such as pump, supplies the motive power to the flow divider. No energy is added to the fluid in the device, although each outlet may have an energy level difference than any other section. When the sections are of like size, the function is to divide the total flow into equal increments of flow, and when the sections are of unlike size, the function is to divide the flow into proportionate increments relative to the chosen geometric displacements.

Since the flow divider is a positive displacement machine, it will accomplish its function over a wide range of pressure of viscosity differentials. Nevertheless, certain limits are imposed due to slip characteristics and torque losses in the machine. Therefore, the performance criteria in this paper will be developed around a unit of average tolerance allowance. The data, so derived, will be averaged. Be aware that these units can require a certain amount of break-away pressure. It is recommended that operation at low pressures (< 100 PSI) is not attempted without consultation with the factory.

General Relationships

In any unit, neglecting any losses, there exists the relationship that

$$Q_i = Q_1 + Q_2 + \dots + Q_n;$$

Where Q_i is the flow into the unit and Q_1 , Q_2 and Q_n are the displacements out of each section. Since no energy is added and if none were lost, it follows that

$$P_i Q_i = P_1 Q_1 + P_2 Q_2 + \dots + P_n Q_n;$$

Where P_i is the pressure into the unit and P_1 , P_2 and P_n are the pressure levels out of each section.

In a unit consisting of any number of/or sizes of sections

$$P_i = \frac{P_1 Q_1 + P_2 Q_2 + \dots + P_n Q_n}{Q_i}$$

In any actual case, the above theoretical observations must be corrected to encompass the pressure drop and slip losses in the flow divider. The pressure drop is primarily a function of the amount of fluid and viscosity. At the usual viscosities (100 to 300 SSU) encountered in hydraulic systems, the pressure drop ΔP_p , can be approximated by the relationship, where n is the number of sections,

$$\Delta P_p \cong \frac{6Q_i}{n} + 25$$

Since the flow divider itself is a parallel circuit, the actual pressure P_{ia} into the unit is

$$P_{ia} \cong \frac{P_1 Q_1 + P_2 Q_2 + \dots + P_n Q_n}{Q_i} + \Delta P_p$$

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Flow Dividers

Slip is a function of the viscosity, pressure differential and clearance and can be estimated from the following chart:

| <u>Model</u> | <u>Displacement Gal./Rev./Sect.</u> | <u>Slip/100 PSI (GPM)</u> | <u>Max. Flow/Sect. (GPM)</u> |
|--------------|---|-------------------------------|----------------------------------|
| PM2 | .00047 | .03 | 2.0 |
| PM6 | .00137 | .04 | 5.5 |
| P21 | .00178 | .06 | 7.6 |
| P23 | .00304 | .07 | 12 |
| P25 | .00425 | .08 | 17 |
| P26 | .00531 | .10 | 20 |
| P27 | .00633 | .11 | 25 |
| P43 | .01020 | .15 | 35 |
| P47 | .01690 | .22 | 50 |

The slip function increases or decreases the flow from a section, dependent on whether the pressure differential is positive or negative across that section.

The performance of a system would be determined in the following manner.


- Determine the size of the sections that will best give the required flow and pressure. The displacement from each section will be the fractional proportion of the sectional displacement versus the sum of the displacements of all the sections. That fraction multiplied by the input flow gives output displaced by each section.
- Determine ΔP_p from $\Delta P_p \cong \frac{6Q_i}{n} + 25$
- Determine P_{ia} from $P_{ia} \cong \frac{P_1 Q_1 + P_2 Q_2 + \dots + P_n Q_n}{Q_i} + \Delta P_p$
- Determine the pressure differential ΔP_1 , ΔP_2 , ΔP_n across the individual section where $\Delta P_1 = \Delta P_{ia} - \Delta P_1$, etc., and from this value, determine the slips S_1 , S_2 , S_n .
- Determine Q_{1a} , Q_{2a} , Q_{na} from $Q_{1a} = Q_1 + S_1$, etc.

The foregoing description is intended as an aid in determining the results of a flow divider system. Any specific application should not be undertaken without independent study, evaluation and testing for suitability. Exceeding the specifications could result in equipment malfunction, property damage, serious injury or death.

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Flow Dividers

P Series, Equal Flow Two Sections

Equal flow two-section units divide flow from a common pump source into separate flows of equal proportion. Both gear sets are assembled to a common shaft.

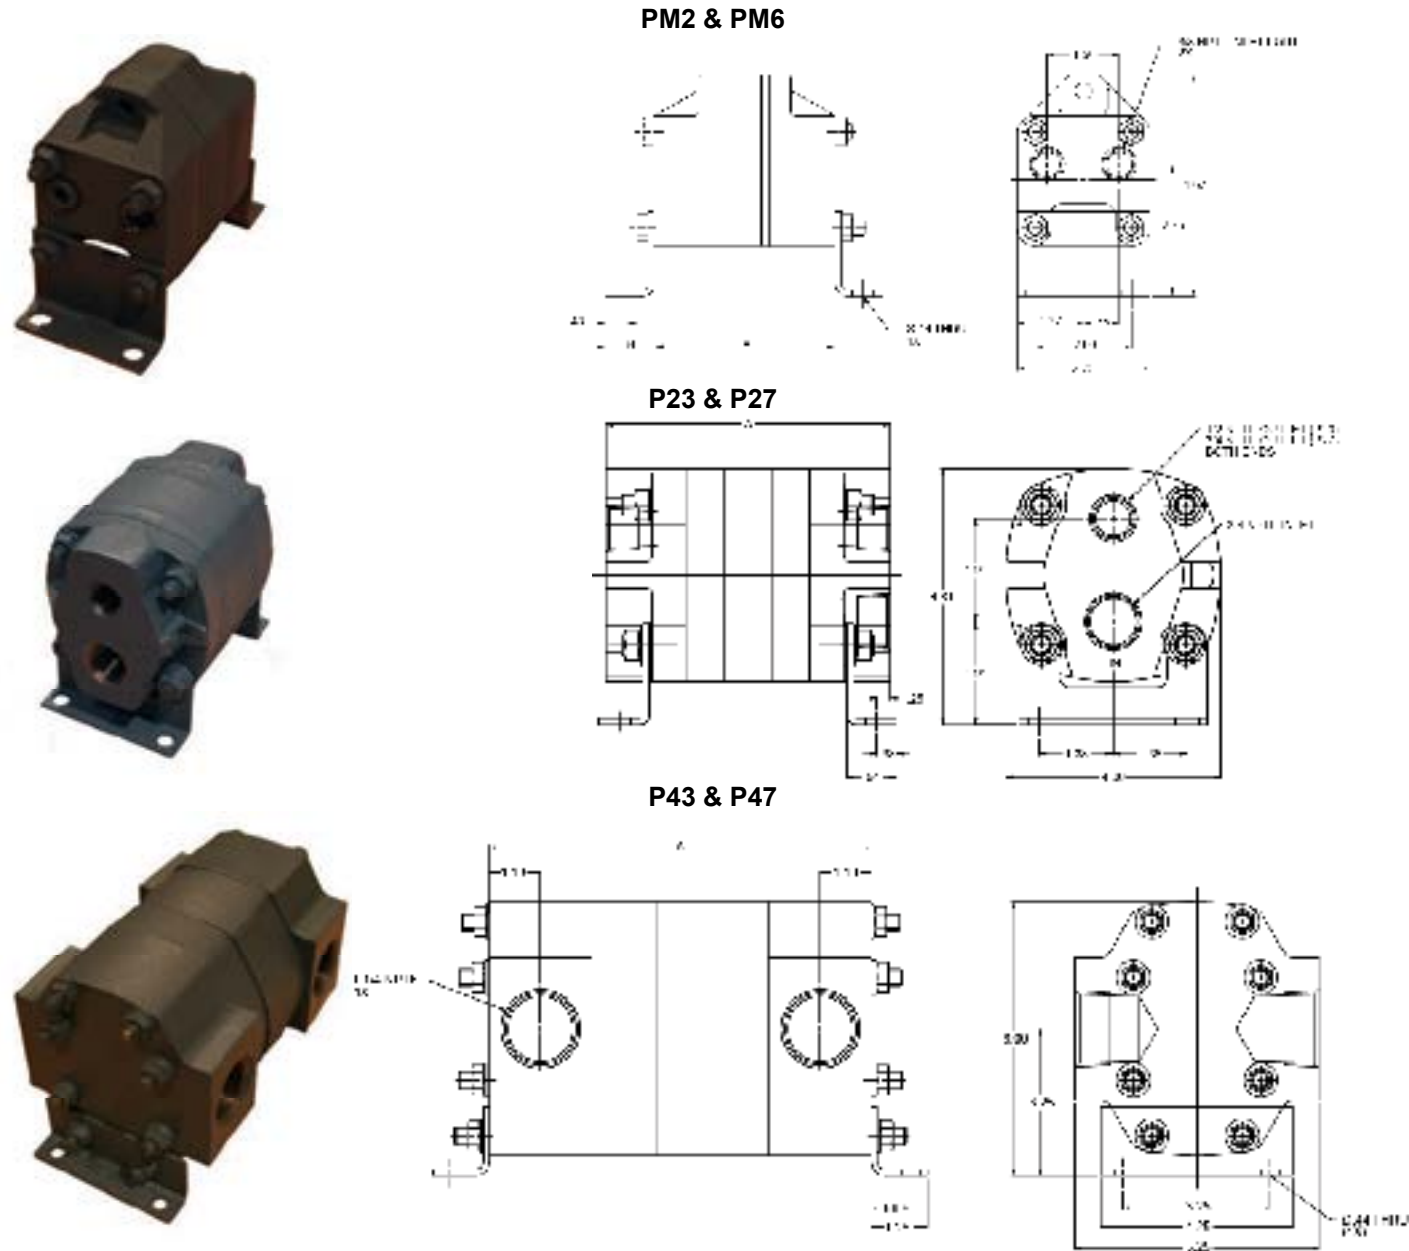


| MODEL | NUMBER OF SECTIONS | TOTAL MAX. INLET (GPM) | 0 PSI DISP. PER SECT. GAL./REV. | SLIP GPM/100 PSI | MAXIMUM INTERMITTENT PSI | MAXIMUM CONTINUOUS PSI | BOLT TORQUE Ft. Lb. | A | MAX. DIFF. BETWEEN SECT. (PSI) |
|-------|--------------------|------------------------|---------------------------------|------------------|--------------------------|------------------------|---------------------|------|--------------------------------|
| PM2 | 2 | 3.5 | 0.00047 | 0.026 | 2500 | 2000 | 13-17 | 3.83 | 1500 |
| PM6 | 2 | 9.5 | 0.00137 | 0.038 | 2000 | 1500 | 13-17 | 4.72 | 1000 |
| P23 | 2 | 21.0 | 0.00304 | 0.068 | 2000 | 1500 | 24-31 | 5.32 | 1000 |
| P27 | 2 | 44.0 | 0.00633 | 0.113 | 2000 | 1500 | 24-31 | 6.86 | 1000 |
| P43 | 2 | 70.0 | 0.01020 | 0.135 | 2000 | 1500 | 24-31 | 7.75 | 1000 |
| P47 | 2 | 100.0 | 0.01690 | 0.210 | 2000 | 1500 | 24-31 | 9.25 | 1000 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems Flow Dividers

P Series, Equal Flow Multi-Sections

Equal flow multi-section units consist of several identical, individual sections coupled together to divide a flow from a common pump source into three or more equal flows. Each set of gear and shaft assemblies are individually supported in needle bearings.

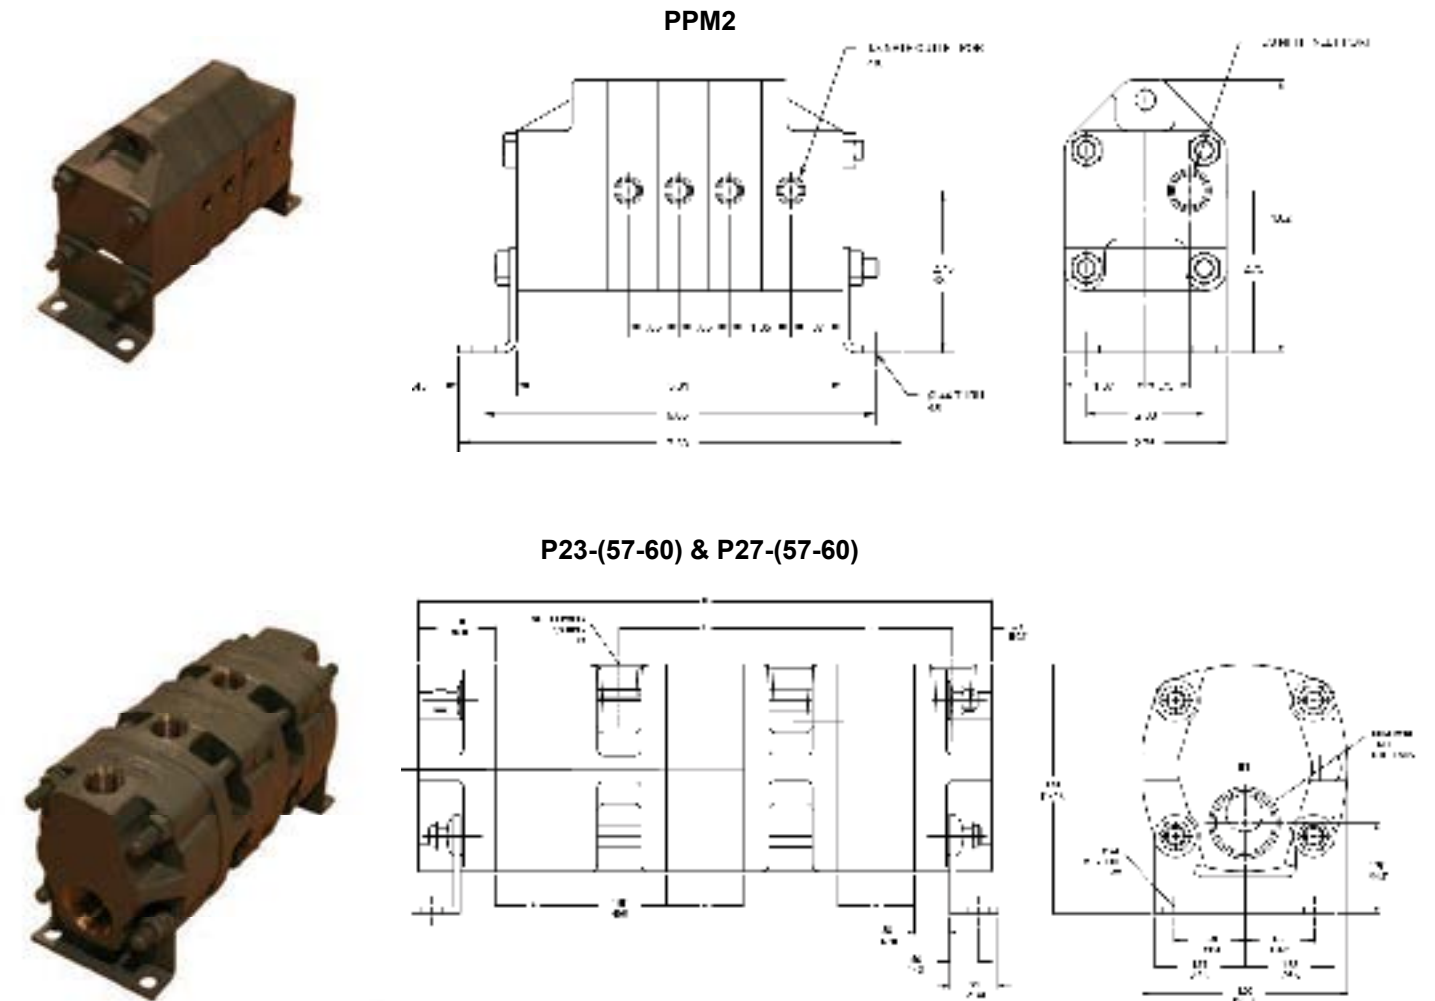

| MODEL | NUMBER OF SECTIONS | TOTAL MAX. INLET (GPM) | 0 PSI DISP. PER SECT. GAL./REV. | SLIP GPM/100 PSI | MAXIMUM INTERMITTENT PSI | MAXIMUM CONTINUOUS PSI | BOLT TORQUE Ft. Lb. | A | B | C | D | MAX. DIFF. BETWEEN SECT. (PSI) |
|--------|--------------------|------------------------|---------------------------------|------------------|--------------------------|------------------------|---------------------|-------|------|------|-------|--------------------------------|
| PPM2 | 4 | 7.0 | 0.00047 | 0.026 | 2000 | 1500 | 13-17 | - | - | - | - | 1000 |
| P23-60 | 3 | 31.5 | 0.00304 | 0.068 | 2000 | 1500 | 24-31 | 0.715 | 2.39 | 2.56 | 8.83 | 1000 |
| P23-59 | 4 | 42.0 | 0.00304 | 0.068 | 2000 | 1500 | 24-31 | 0.715 | 2.39 | 2.56 | 11.39 | 1000 |
| P23-58 | 5 | 52.5 | 0.00304 | 0.068 | 2000 | 1500 | 24-31 | 0.715 | 2.39 | 2.56 | 13.95 | 1000 |
| P23-57 | 6 | 63.0 | 0.00304 | 0.068 | 2000 | 1500 | 24-31 | 0.715 | 2.39 | 2.56 | 16.51 | 1000 |
| P27-60 | 3 | 66.0 | 0.00633 | 0.113 | 2000 | 1500 | 24-31 | 1.490 | 3.16 | 3.33 | 11.16 | 1000 |
| P27-59 | 4 | 88.0 | 0.00633 | 0.113 | 2000 | 1500 | 24-31 | 1.490 | 3.16 | 3.33 | 14.49 | 1000 |
| P27-58 | 5 | 110.0 | 0.00633 | 0.113 | 2000 | 1500 | 24-31 | 1.490 | 3.16 | 3.33 | 17.82 | 1000 |
| P27-57 | 6 | 132.0 | 0.00633 | 0.113 | 2000 | 1500 | 24-31 | 1.490 | 3.16 | 3.33 | 21.15 | 1000 |

POSI LOCK® 100-TON & 200-TON Hydraulic Puller Systems WARRANTY

All POSI LOCK forged parts carry a lifetime warranty with the exception of transmission jaws. All other POSI LOCK parts and components are guaranteed for one year against defects in materials and workmanship to meet the exacting standards and requirements of professional maintenance. Every product manufactured by POSI LOCK and found to be defective (by the factory) in either material or workmanship, will be repaired or replaced. This warranty applies to the original purchaser (end user) only and is nontransferable.

This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended or used in a manner inconsistent with any instructions regarding its use. Use of an impact wrench voids the warranty.

Damaged components, including bent rams, dented or crushed cylinder walls are the result of misuse, misapplication or a combination of both and will not be considered under warranty. Normal wear such as worn out seals, couplers, O-rings and springs does not constitute a defect and will not be considered for warranty credit. The foregoing constitutes the only warranty made by the company.

POSI LOCK shall not be liable for any consequential or incidental damage or loss whatsoever. Any and all expressed and implied warranties, including without limitation, any warranties of merchantability and fitness for a particular purpose, are limited to the original purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Hydraulic components not manufactured by POSI LOCK. Please refer to the original manufacturer's warranty statement.

Notice: POSI LOCK reserves the right to make changes in design or construction of tools and equipment without obligation to incorporate such changes in tools and equipment previously sold.

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Киргизия (996)312-96-26-47

Россия (495)268-04-70

Казахстан (7172)727-132

<https://posilock.nt-rt.ru/> | pfk@nt-rt.ru